



NL

GBEBRUIKSAANWIJZING

Nadat u het vest gebruikt heeft moet u eerst de deksel [C] van het mechanisme schroeven. Daarna kunt u het reddingvest met schoon zoetwater afspoelen. Laat vervolgens, indien noodzakelijk, het vest leeglopen. Plaats hiervoor de afsluitdop ondersteboven op het mondopblaaspipje. Als het vest helemaal leeggelopen is, plaats dan de afsluitdop weer goed op het mondopblaasventiel. Laat het vest drogen. Doe dit niet in de felle zon of in de directe omgeving van een warmtebron. Maak uw vest weer gebruiksklaar door de volgende handelingen uit te voeren [zie ook de afbeeldingen]:

1. Schroef de [on-]gebruikte CO²-cilinder [A] van het mechanisme [B] af.
2. Maak het huis van het mechanisme goed schoon en droog.
3. Schroef een nieuwe of ongebruikt deksel [mits de groene verzegeling E nog in de achterkant van het deksel aanwezig is] op het mechanisme. Schroef het deksel zo ver mogelijk aan. Controleer of de verloopdatum niet overschreden is, is dit wel zo, dan vervangen [zie gebruiksaanwijzing vest].
4. Schroef een nieuwe of de ongebruikte CO²-cilinder op het mechanisme. Let op dat u de juiste cilinder monteert: 24g CO², met 1/2" UNF-aansluiting.
5. Breng de borgclip [D] aan.
6. Zorg ervoor dat de controlepunten groen zijn.
7. Vouw het vest [zie gebruiksaanwijzing vest].

Waarschuwing: Sla het vest op een droge en donkere plaats op. Opslag- en gebruikscondities: -30°C en +50°C. Controleer uw reddingvest regelmatig op lekkage door middel van:

- Het vest op te blazen met de mond d.m.v. het mondopblaaspipje.
- Laat het minimaal een uur liggen.
- Controleer het vest op eventuele lekkage.
- Laat het vest leeglopen en vouw het vest weer.

Let op: Laat uw Besto Inflatable bij professioneel gebruik ieder jaar en bij recreatief gebruik iedere twee jaar herkeuren door een gecertificeerd keuringsstation.

≈ LIFESAVER SINCE 1920 ≈



GB

INSTRUCTIONS FOR USE

After use you can rinse the jacket with freshwater. When necessary, deflate the jacket totally by reversing the valve cap and inserting it in the oral inflation tube. Refit the valve cap correctly on the oral inflation tube. Do not dry your lifejacket in full sunshine or near a source of heat. Prepare your lifejacket by doing as follows:

1. Screw the [un-]used CO²-cylinder [A] from the mechanism [B].
2. Clean and dry the housing carefully.
3. Screw a new or an unused cap [only if the checkbutton E is still in the rear of the cap] on the mechanism. Screw it as far as possible. Check that the expiration date has not been exceeded. If this is so, replace the cap [see instruction lifejacket].
4. Screw a new or the unused CO²-cylinder on the mechanism. Pay attention that the cylinder has the correct filling-weight and connection: 24g CO², 1/2" UNF.
5. Place the lockclip [D].
6. Make sure the Indicators are green.
7. Fold the jacket [see instruction lifejacket].

Warning: Store your lifejacket in a dry and dark place. Storage and use conditions: -30°C en +50°C. Check your lifejacket regularly for leaks by means of:

- Inflate the jacket orally.
- Leave it for at least one hour.
- Examine for signs of leakage.
- Deflate the jacket and fold the buoyancy chamber into the cover.

Attention: Have your Besto Inflatable inspected bij a certified inspection service center every year in case of professional use and every two years in case of leisure use.

Besto

Komeet 13,
8448 CG Heerenveen
Phone +31 [0] 522-27 81 40
Fax +31 [0] 522-27 81 49
info@besto-redding.nl
www.besto-redding.com




United Moulders system (MK5)

24g CO²

BESTO AUTOMATIC INFLATABLE
100N | Junior 20 - 50 kg

GB NL D F I

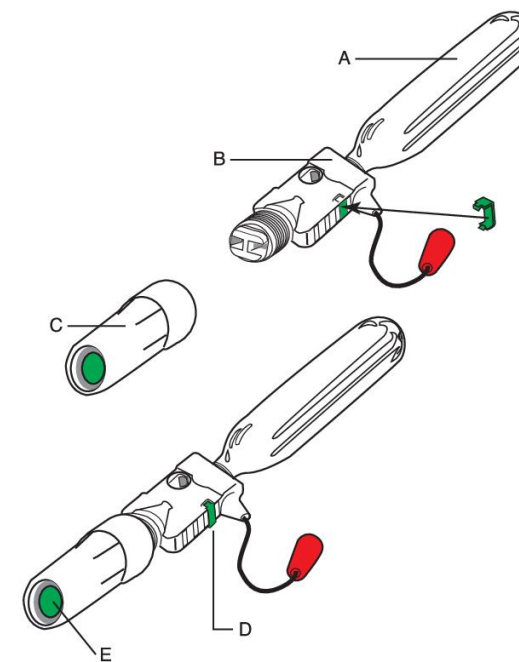

A. Gascylinder / Pressgasflasche / Cartouche / Cilindro / Gascylinder 24g

B. Mechanisme / Mechanismus / Mécanisme / Meccanismo / Mechanism

C. Deksel / Deckel / Couvercle / Calotta / Cover

D. Borgclip / Sicherung / Goupille de sécurité / Sicura / Lockclip

E. Controlepunt / Kontrollpunkt / Point de Contrôle / Foro di controllo / Indicators

20811052 - RS2733



rubberboot
EXPERT.NL

≈ LIFESAVER SINCE 1920 ≈